

How to Update UnidrafG

SINWA ELECTRIC CORPORATION


CAD DIVISION E-mail: unidraf@gmail.com

This is the procedure to automatically update only the program files in the UnidrafG folder. This method is recommended for normal updates.

!!Attention!!-

If this product is installed on a PC, do not run it with the installer.

Once you run the installer, you will see the following screen: Following the steps below to uninstall the program will remove all the default data and configuration files already installed.

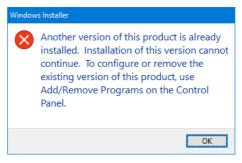

1. Open the following homepage for Unidraf.

https://sinwa.co.jp/support_en/

2. Click the [UnidrafG] in the [Unidraf PROGRAM SUPPORT]



3. Enter **"ID"** and the **"Password"** for support and click the [login] button.




4. Click the [Program Download] in the [UnidrafG series Online Support].

Unidraf G series Online Support


- ► The Supported Newest Functions
- ► The Newest Bug Fix Information
- ▶ Program Download
- 5. Click the [Automatic update program] in the [Program List].
 - * Please also download other required files. (Help file etc.)

Items /File(Bytes)		Location:Path
• Opnate • Filename • Version • Revision *All the EXE	update program . Jan.01.2024 : Updater.zip(66,091KB) : 1.0 : I files and DLL files are included. e, the manual, etc. are not included.	¥UnidrafG¥
• Configurat	tion File for PLC Link : Jan.01.2024 : PLC.zip(0KB)	¥UnidrafG¥PLC¥
	r PLC : Jan.01.2024 : PLC_UDG.zip(0KB)	¥UnidrafG¥symbol¥
50.400.000.0000.	Elp : Jan.01.2024 : UDGHelp_e.zip(0KB)	¥UnidrafG¥Help¥


- 6. Extract the downloaded file.
- 7. Double-click "Unidraf_Updater.exe" in the extracted folder.

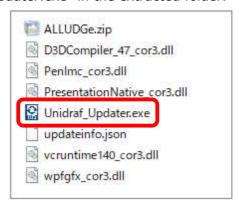

8. When the update dialog box appears, click Update.

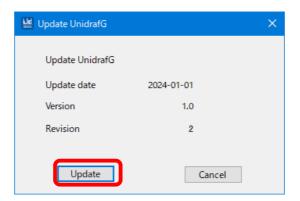


* If the following screen appears when running "Unidraf_Updater.exe", click "More info Information" and then click "Run anyway".

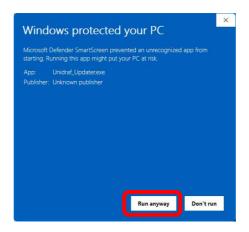

* If the "Select Folder" screen appears after clicking the update button, select the folder where UnidrafG is installed.

Example: C:\Sinwa\UnidrafG\Sinwa\Uni

9. When the following message is displayed, press the "OK" button.

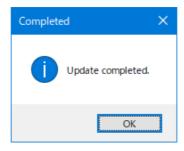

10. Start UnidrafG and check the "Version" and "Revision" in the [Help] - [About Unidraf].

