



How to Update UnidrafX


SINWA ELECTRIC CORPORATION
CAD DIVISION E-mail: unidraf@gmail.com

This is the procedure to automatically update only the program files in the UnidrafX folder. This method is recommended for normal updates.

!! Attention !!

If this product is installed on a PC, do not run it with the installer.

Once you run the installer, you will see the following screen: Following the steps below to uninstall the program will remove all the default data and configuration files already installed.

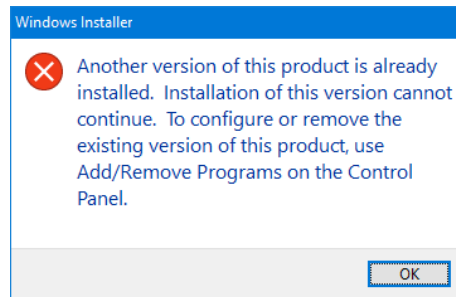

1. Open the following homepage for Unidraf.

https://sinwa.co.jp/support_en/

2. Click the [UnidrafX] in the [Unidraf PROGRAM SUPPORT]



3. Enter "ID" and the "Password" for support and click the [login] button.

- Click the **[Program Download]** in the **[UnidrafX Online Support]**.

UnidrafX Online Support


- [▶ The Supported Newest Functions](#)
- [▶ The Newest Bug Fix Information](#)
- [▶ Program Download](#)

- Click the **[Automatic update program]** in the **[Program List]**.


* Please also download other required files. (Help file etc.)

Items /File(Bytes)	Location:Path
• Automatic update program • Update : Jan.01.2024 • Filename : Updater.zip(66,102KB) • Version : 1.0 • Revision : 1 *All the EXE files and DLL files are included. *The Help file, the manual, etc. are not included. *If an error occurs and the file does not download, please see here .	YUnidrafXY
• Configuration File for PLC Link • Update : Jan.01.2024 • Filename : PLC.zip(0KB)	YUnidrafXYPLCY
• Symbol for PLC • Update : Jan.01.2024 • Filename : PLC_UDX.zip(0KB)	UnidrafXYSymbolY
• Symbol for G-Jicmk • Update : Jan.01.2024 • Filename : G-Jicmk.zip(0KB)	UnidrafXYSymbolY


- Extract the downloaded file.
- Double-click "Unidraf_Updater.exe" in the extracted folder.

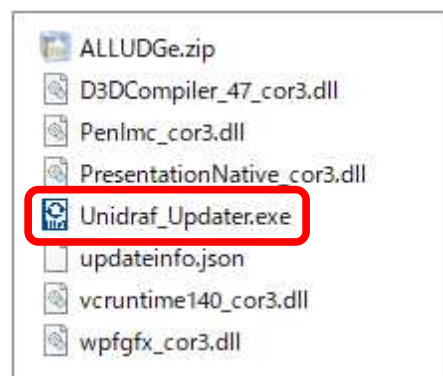

8. When the update dialog box appears, click Update.

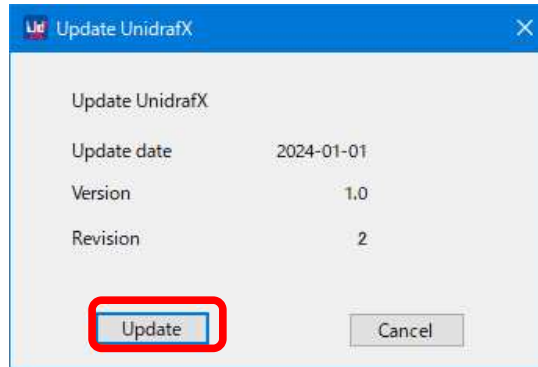


* If the following screen appears when running "Unidraf_Updater.exe", click "More info Information" and then click "Run anyway".

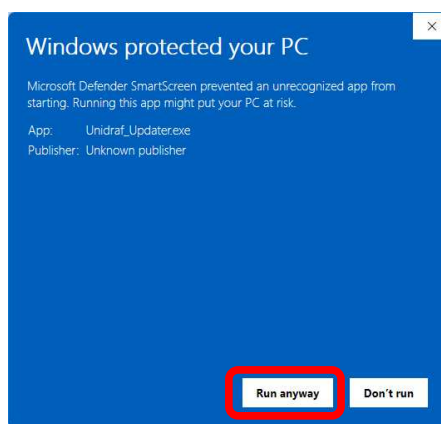

* If the "Select Folder" screen appears after clicking the update button, select the folder where UnidrafX is installed.

Example: **C:¥Sinwa¥UnidrafX¥**

9. When the following message is displayed, press the "OK" button.

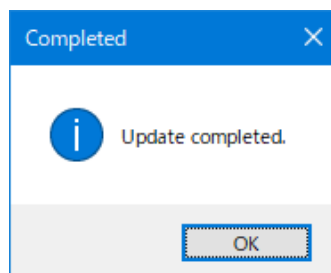

10. Start UnidrafX and check the "Version" and "Revision" in the **[Help] - [About Unidraf]**.

